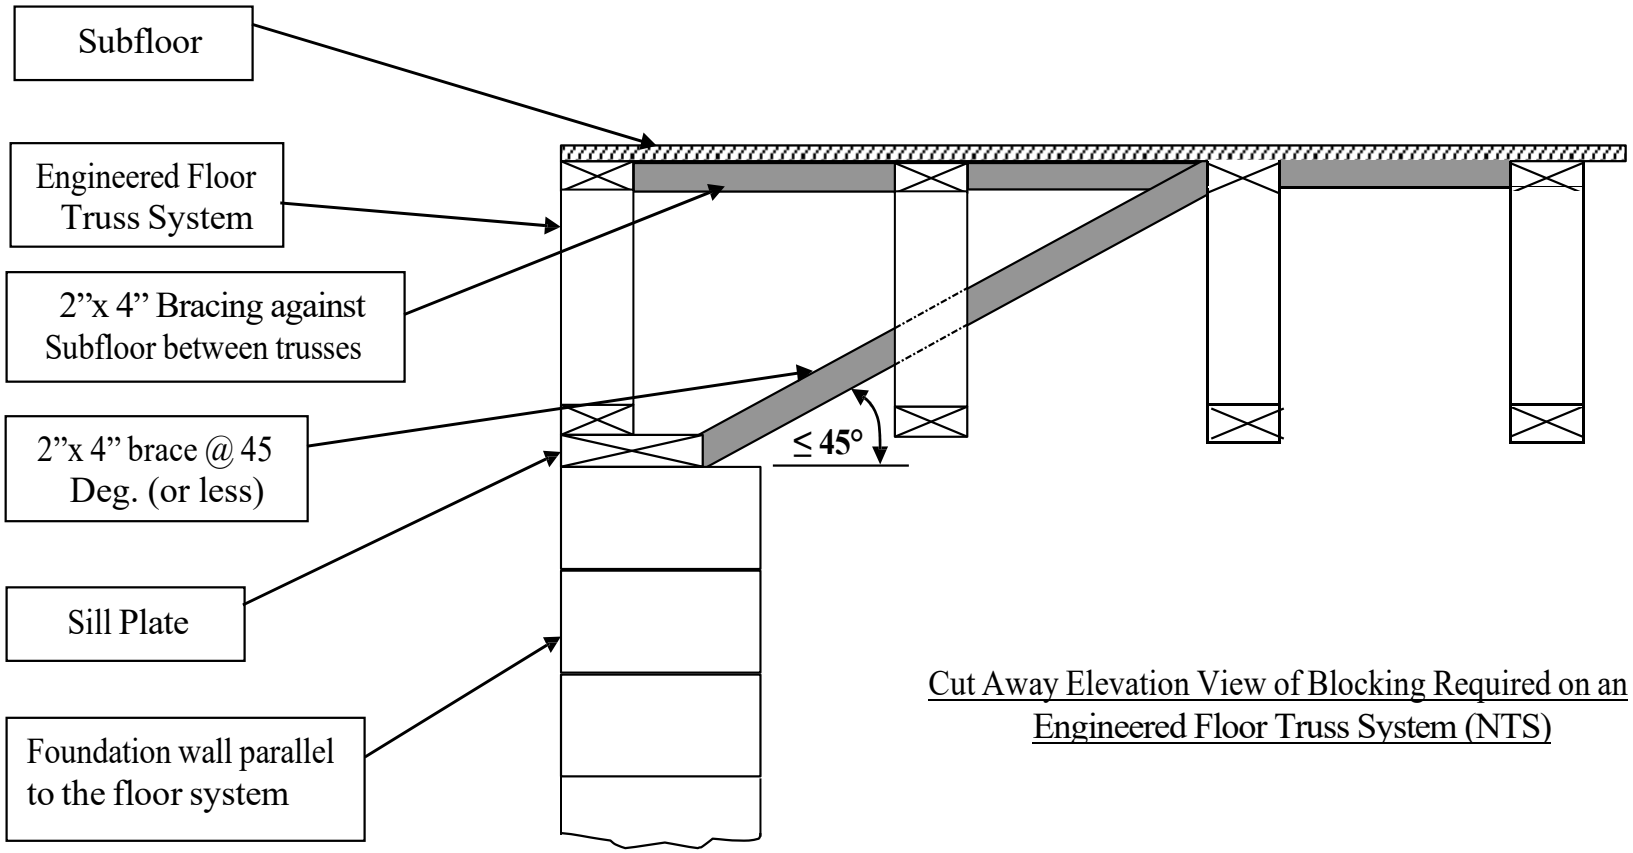


Cut Away Elevation View of Blocking Required on an Engineered Floor Truss System (NTS)

INSTRUCTIONS:
1. Install a 2" x 4" brace from the inside edge of the sill plate to the side of the top cord at the second truss at less than or equal to 45° (as shown).
2. Install 2"x 4" flat bracing on the underside of the subfloor anchored at each end to the top cords of the trusses (as shown).
3. Bracing shall be installed at no more than 32" o.c. per SPS 321.18(1)(d)2.a.
4. Fasteners shall be installed in accordance with structural analysis or the fastener schedule in Table 321.02-2.